


# Heating




## User Guide





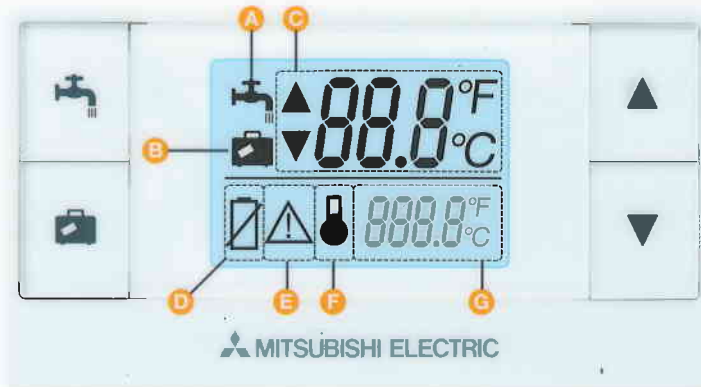


### Wireless Controller PAR-WT50R-E

Making a  
World of  
Difference

#### Wireless Controller



Button	Function
 Forced DHW Boost	Used to allow Ecodan to force start the domestic hot water (DHW) mode
 Holiday Mode	Used to allow Ecodan to enter holiday mode
 Up/Down	Used to adjust room temperature and set duration time in holiday mode

Main Screen Icons	Description
 DHW Boost Indicator	Indicates that Ecodan is in DHW boost mode
 Holiday Mode Indicator	Indicates that Ecodan is in holiday mode
 Set Temperature Display	Indicates the set room temperature
 Battery Life Indicator	Indicates when to replace batteries
 Error Indicator	Indicates unit failure or communication error received
 Room Sensor Indicator	Indicates this remote controller is used to measure a room temperature
 Room Temperature Display	Indicates the room temperature measured by the wireless controller